ARTWORK @ 100% ARTWORK @ 100% (FRONT OF CARD WITH CLEANER ATTACHED) (FRONT OF CARD BY ITSELF) THESE INSTRUCTIONS STICKY SCREEN CLEANER

WILL BE IMPRINTED ON THE REAR SIDE OF THE CARD IF NO ARTWORK IS SUPPLIED.



How to Use:

- 1. Peel Screen Cleaner Pad from the back of your tablet or laptop.
- 2. Wipe and clean your display.
- 3. Stick back Screen Cleaner Pad on the rear side of your tablet or laptop.
- 4. Wash the pad when it is dirty and dry it.

Notice:

- 1. Wipe the surface area where you stick it.
- 2. Keep the pad backside clean.
- 3. Wash it with water or detergent when it becomes dirty and less sticky.
- 4. Keep it away from children.

PEY4012

Tablet Cling Wipe Rectangle

Item Number: PEY4012

Item Size: 3.5" W x 2" H (cleaner); 5 1/2" W x 8" H (card)
Max Imprint Area: Full Bleed (both) (Indicated By Dotted Line, Does Not Print) Imprint Method: 4 COLOR PRO



ARTWORK @ 100% (CLEANER)